


# PULL-OUT WIRE ACCESSORIES


## UNIVERSAL ASSEMBLY AND INSTALLATION INSTRUCTIONS

2409 PLANTSIDE DRIVE • JEFFERSONTOWN, KY 40299  
800-626-1126 • 502-499-5835 • 502-491-2215 FAX • www.rev-a-shelf.com



### METAL SCREWS

Used to assemble the baskets to the upright.



### WOOD SCREWS


Used to secure the unit to your cabinet.

### CONTENTS:

| Part #     | Wire Baskets | Slide/Support Arm Assembly | Metal Screws | Wood Screws | Installation Tool |
|------------|--------------|----------------------------|--------------|-------------|-------------------|
| 598 Series | 1            | 1 Set                      | 4            | 4           | 1                 |
| 599 Series | 2            | 1 Set                      | 4            | 4           | 1                 |

#### STEP 1


Inspect contents of carton to insure all items are present. Photo layout features part number 598-15 S; all other kits are installed in the same manner.

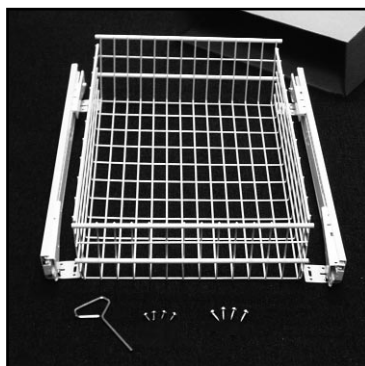

STEP 1

#### STEP 2


Lift the support arms to a vertical position; use the wrench provided to tighten the screws at the end of the supports ensuring that the bosses fit into their respective holes.

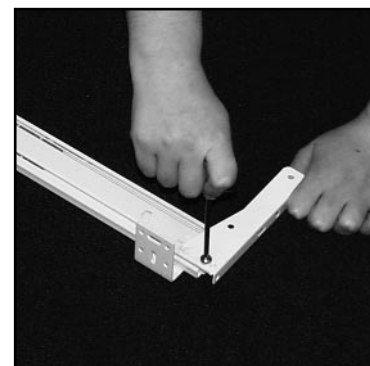

STEP 2

#### STEP 3

Line up the ends of the basket(s), (wire frames) with the holes on the support arms and insert the metal screws (shorter screws) in the basket(s) with the wrench provided.

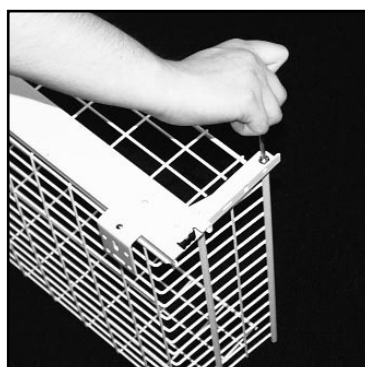

STEP 3

#### STEP 4

Place the framework inside your designated space for installation. In the closed position, insert the front 2 screws, making sure the framework is square with the front of the cabinet.




STEP 4

#### STEP 5

If sufficient clearance, proceed to install the rear 2 screws and your installation is complete.

If sufficient clearance is not available, mark two rear screw locations with a pencil, pull the framework completely out and on the outside of each slide, you will find a black trigger (figure A), which releases the slides and disassembles the framework from the floor mounted slides. Remove the framework, line up rear screw locations with your pencil marks and install the rear screws. Then re-assemble the framework, and your installation is complete.

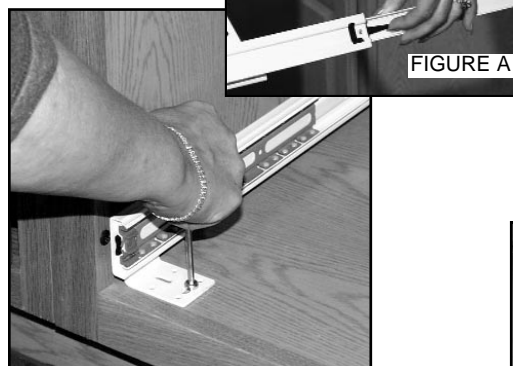

STEP 5

FIGURE A



598 Series




599 Series

# PULL-OUT WIRE ACCESSORIES


## UNIVERSAL ASSEMBLY AND INSTALLATION INSTRUCTIONS

2409 PLANTSIDE DRIVE • JEFFERSONTOWN, KY 40299  
800-626-1126 • 502-499-5835 • 502-491-2215 FAX • www.rev-a-shelf.com



### METAL SCREWS

Used to assemble the baskets to the upright.



### WOOD SCREWS

Used to secure the unit to your cabinet.

### CONTENTS:

| Part #      | Wire Baskets | Slide/Support Arm Assembly | Metal Screws | Wood Screws | Installation Tool | Hamper | Polymer |
|-------------|--------------|----------------------------|--------------|-------------|-------------------|--------|---------|
| 590 Series  | 1            | 1 Set                      | 4            | 4           | 1                 | 1      |         |
| 594 Series  | 3            | 1 Set                      | 12           | 4           | 1                 |        |         |
| 9-WM Series | 1            | 1 Set                      | 12           | 4           | 1                 | 1      | 3       |

### STEP 1


Inspect contents of carton to insure all items are present. Photo layout features part number 594-20 S; all other kits are installed in the same manner.



STEP 1

### STEP 2

Lift the support arms to a vertical position; use the wrench provided to tighten the screws at the end of the supports ensuring that the bosses fit into their respective holes.

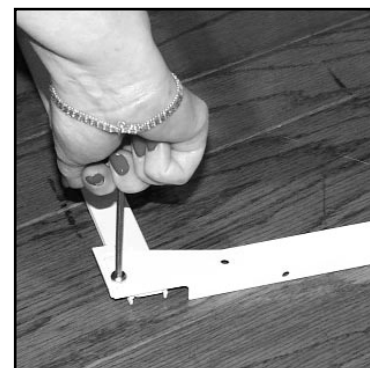

STEP 2

### STEP 3

Line up the ends of the basket(s), (wire frames) with the holes on the support arms and insert the metal screws (shorter screws) in the basket(s) with the wrench provided.

**Note:** Do not use the longer wood screws.


**Note:** On the 9-WM container place the small triangle in the rear as pictured at right.



STEP 3

### STEP 4

Place the framework inside your designated space for installation. In the closed position, insert the front 2 screws, making sure the framework is square with the front of the cabinet.

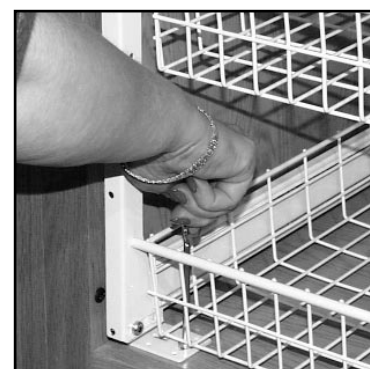

STEP 4


### STEP 5

If sufficient clearance, proceed to install the rear 2 screws and your installation is complete.

If sufficient clearance is not available, mark two rear screw locations with a pencil, pull the framework completely out and on the outside of each slide, you will find a black trigger (figure A), which releases the slides and disassembles the framework from the floor mounted slides. Remove the framework, line up rear screw locations with your pencil marks and install the rear screws. Then re-assemble the framework, and your installation is complete.



FIGURE A

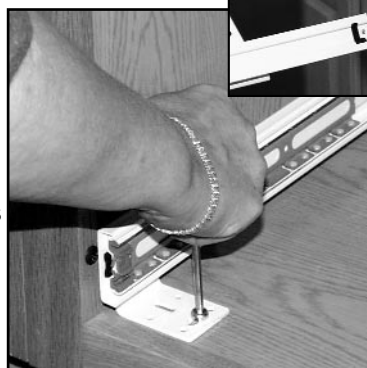

STEP 5



594 Series



590 Series



9-WM Series